



Drawe

Brā

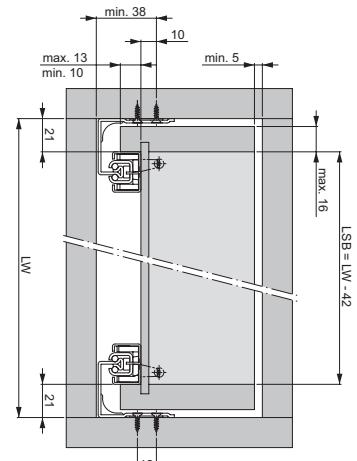


Minimum installation depth  
Drawer

- Mounting positions for cabinet profiles and locking adapter

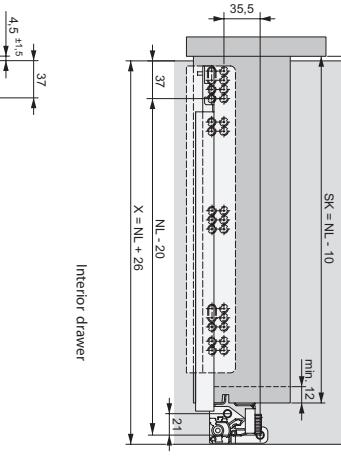


B6

• Drawer notches for full extension

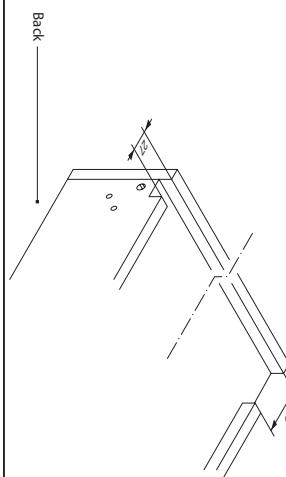


- Drilling jig for locking left/right

Bullying Intervention

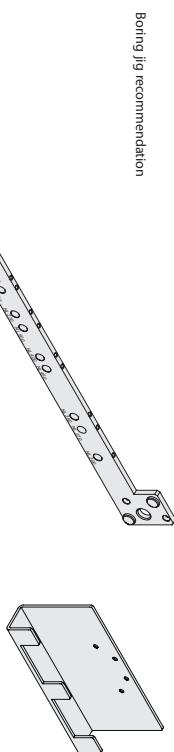

- Drilling jig for adapter left/right

- Drilling jig for adapter left/right

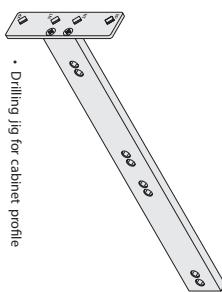

- Drilling jig for cabinet profile

- Drilling jig for cabinet profile

